
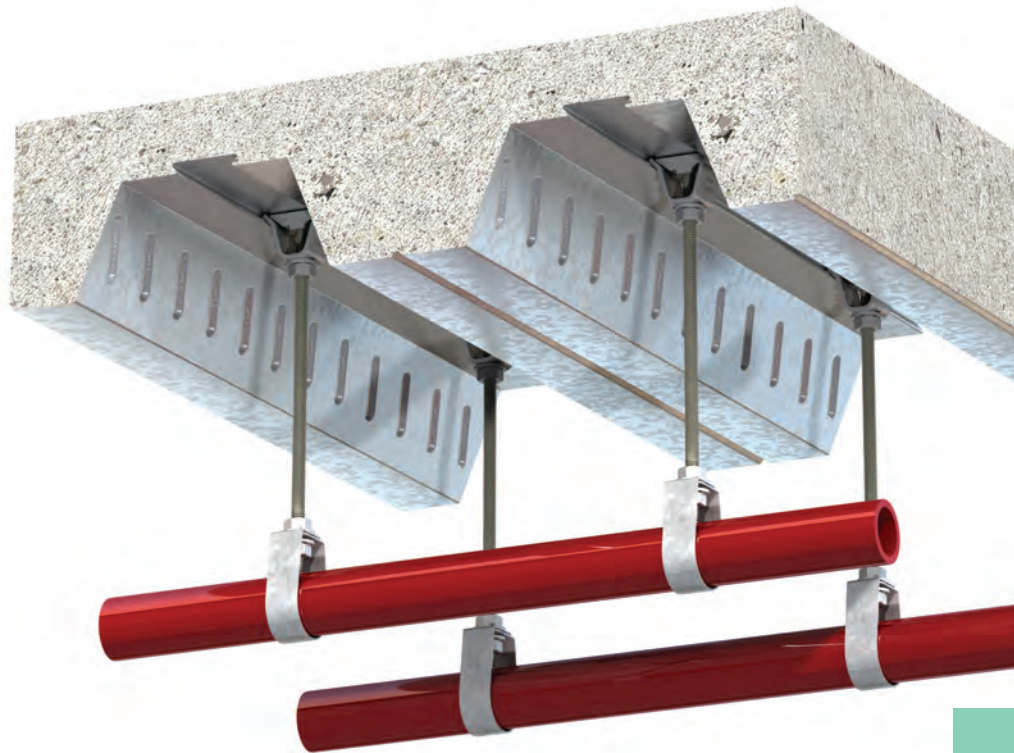
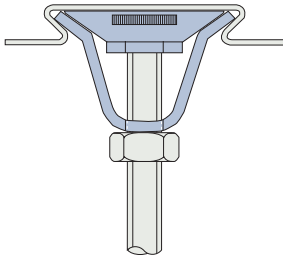


Type MW2 - Multiwedge 2

Bracket: Pre-galvanised strip
 Multinut: Malleable iron, bright zinc plated

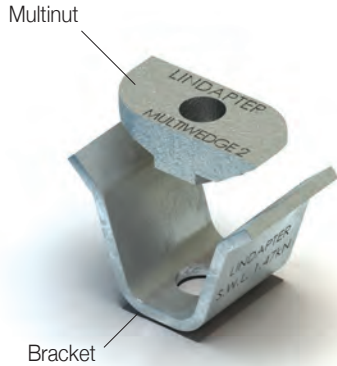


The Multiwedge 2 is designed for Multideck® 60 and Multideck 80 profiles manufactured by Kingspan® Structural Products (see page 56).

Product Code	Rod 4.6	Safe Working Load	Tightening Torque Nm
		(3:1 Factor of Safety) Tensile / 1 Rod kN	
MW06	M6	1.47	10
MW08	M8	1.47	10
MW10	M10	1.47	10

Order example: MW06

Installation

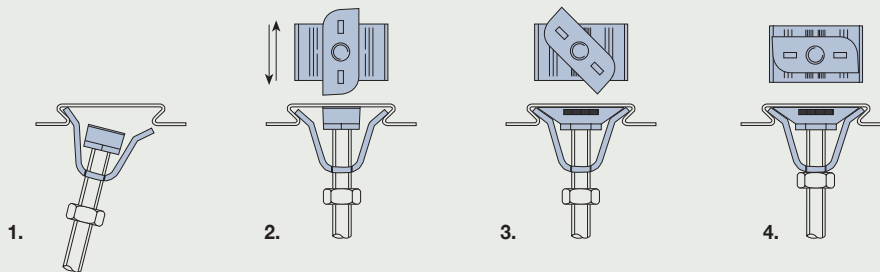

1. Pre-assemble the bracket and Multi-Nut (flat surface facing up) onto the threaded rod and insert one side of bracket into re-entrant channel of decking.
2. Snap other leg of bracket into position inside the decking and slide the assembly to desired position along length of re-entrant channel.
3. Push and turn the multi-nut clockwise until it locks into the channel walls.
4. Tighten the hexagon nut beneath the assembly.

Note: If the decking profile is deformed/distorted, the fixing should not be installed. If in doubt, please contact Lindapter's Technical Support Department for advice.